

Performance Fluids CL1800F1 Applicator

Operating Instructions





Introduction

These instructions relate only to the operation of the Performance Fluid Applicator when applying PerFluoroLube CL1800F1 lubricant to chains. The lubricant can be applied during production, but it is up to the individual site managers to determine the safest and most effective point of application.

Getting Started

- Open air release tap (3) and fully exhaust any stored air.
- Unscrew lid fasteners (1) and remove lid (5).
- Check for debris in cylinder (2).
- Fill cylinder (2) with PerFluoroLube CL1800F1.
- Re-attach lid (5) and fasten hand tight.
- Close air release tap (3).
- Attach air valve to lid and lock into position (6).
- Back off the air regulator (7) fully.
- Connect to airline (9)
- Adjust regulator (7) clockwise to read 5-6 bar on the lid pressure gauge (8). (**Do not exceed 7 Bar**)
- Disconnect the airline air (9) and monitor for 1 minute to check for pressure dropping.
- If the gauge (8) pressure drops check for leaks and resolve the problem.
- Reconnect to the airline (9).
- Press trigger on gun to disperse lubricant on to the chain lubrication points.

Lubrication Completed

- Turn air valve (9) to closed position.
- Open air release tap (3) **slowly** and exhaust all stored air.
- Turn back regulator (7) anti clockwise.
- Close air release tap (3).
- Disconnect air valve from lid (6).
- Disconnect airline (9).

